

# Super L IV™ Quick Start

## Contents

Verify that your Super L IV package includes the following:

- ✓ Super L IV digitizing tablet
- ✓ Transducer (corded or cordless pen, 4-button cursor, or 16-button cursor)
- ✓ Computer interface cable with 9-pin connector for serial connection
- ✓ USB Cable
- ✓ Power supply - required only for serial installations
- ✓ CD with drivers and diagnostics (varies with configuration)
- ✓ Super L IV User's Guide
- ✓ Super L IV Quick Start (this document)
- ✓ Plan Holder (optional)
- ✓ Accessory Tray (optional)
- ✓ Mounting Brackets (optional)
- ✓ Two Feet (optional)
- ✓ Registration Card

**Note**

Check the insert in the large packing box for the optional items listed above.

**Note**

Some digitizing applications (typically, non-Windows CAD applications where the tablet is used solely as a digitizer with no mouse functions) may not require the use of the TabletWorks software. If you need to configure your Super L IV for use with a third-party application, please refer to the installation instructions in the Super L IV User's Guide, or the Super L IV Help file, where you will find a complete list of vendor configuration settings.

**Note**

If your tablet came with a TabletWorks CD, install the software *first*, then set up the hardware connections for Serial OR USB, following the instructions below.


## Software Configuration

Software drivers provide the communication bridge between your software application and the Super L IV. The GTCO CalComp-supplied *TabletWorks* CD supports *reduced functionality Wintab* and *TabCon*-compatible applications. If you're not sure about your application's driver requirements, contact your application vendor.

### Installing the Driver

Insert the CD into the CD-ROM drive on your computer and follow the onscreen prompts to complete the driver installation. If the CD doesn't *autorun*, click on the **Start** button on the Windows Task Bar and select *Run* from the menu. Type `X:\setup.exe` (X represents the CD drive letter).

# Hardware Configuration

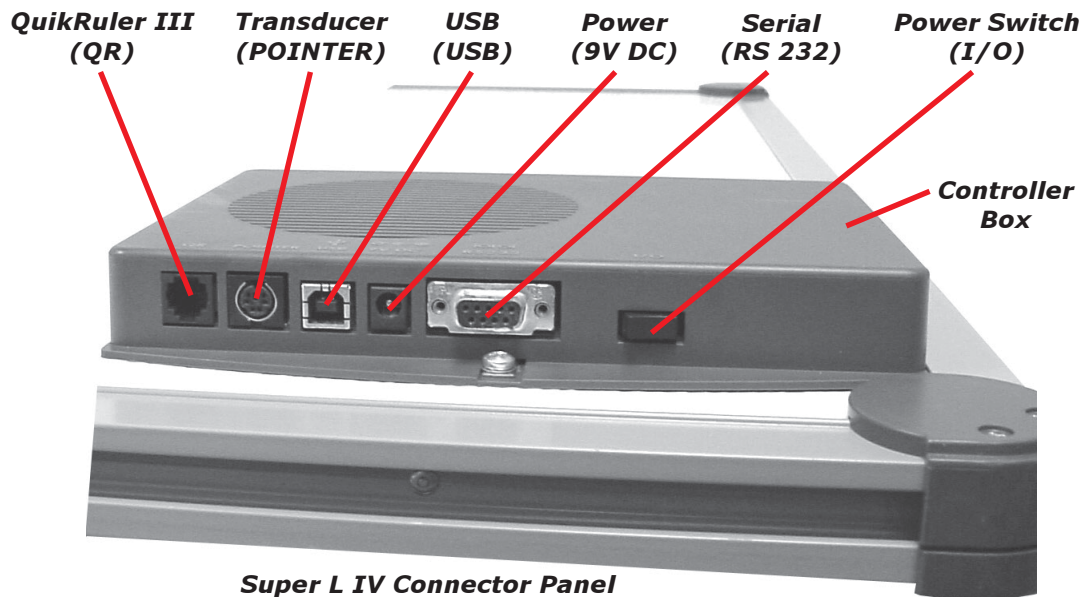


## Note

Connect *only* Serial or USB—not both.

## RS-232 Serial Connection

- 1 Connect the corded transducer – cursor or pen – to the appropriate jack on the digitizer’s Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it.
- 2 Connect the RS-232 serial cable to the serial jack on the Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it. Connect the 9-pin connector of the serial cable to the serial port on your computer.
- 3 Plug the power supply into an AC outlet. Connect the power supply to the appropriate jack on the Connector Panel. Turn the Power Switch on. The digitizer will beep four times, indicating it has power.
- 4 To prepare the digitizer for driver support, use the transducer to click on the **S 0 1** buttons on the SuperSet Menu. If you are using a cordless transducer, press a button to take it out of *Sleep Mode* before clicking on the SuperSet Menu buttons.
- 5 Restart your computer.

## USB Connection –With *TabletWorks* CD only–

- 1 Connect the corded transducer – cursor or pen – to the appropriate jack on the digitizer’s Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it.
- 2 Connect the USB interface cable to the USB jack on the Super L IV Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it.
- 3 Connect the other end of the USB cable to any one of the USB ports  on your computer or USB hub. Turn the Power Switch on the Connector Panel on. The digitizer will beep four times, indicating it has power.

## Note

Power is supplied through the USB port. No additional power source is needed for this installation.

- 4 If Windows displays the *Found New Hardware* prompt, follow the onscreen instructions to finish the *Found New Hardware* process.